


PETROL (Fuel) PUMP

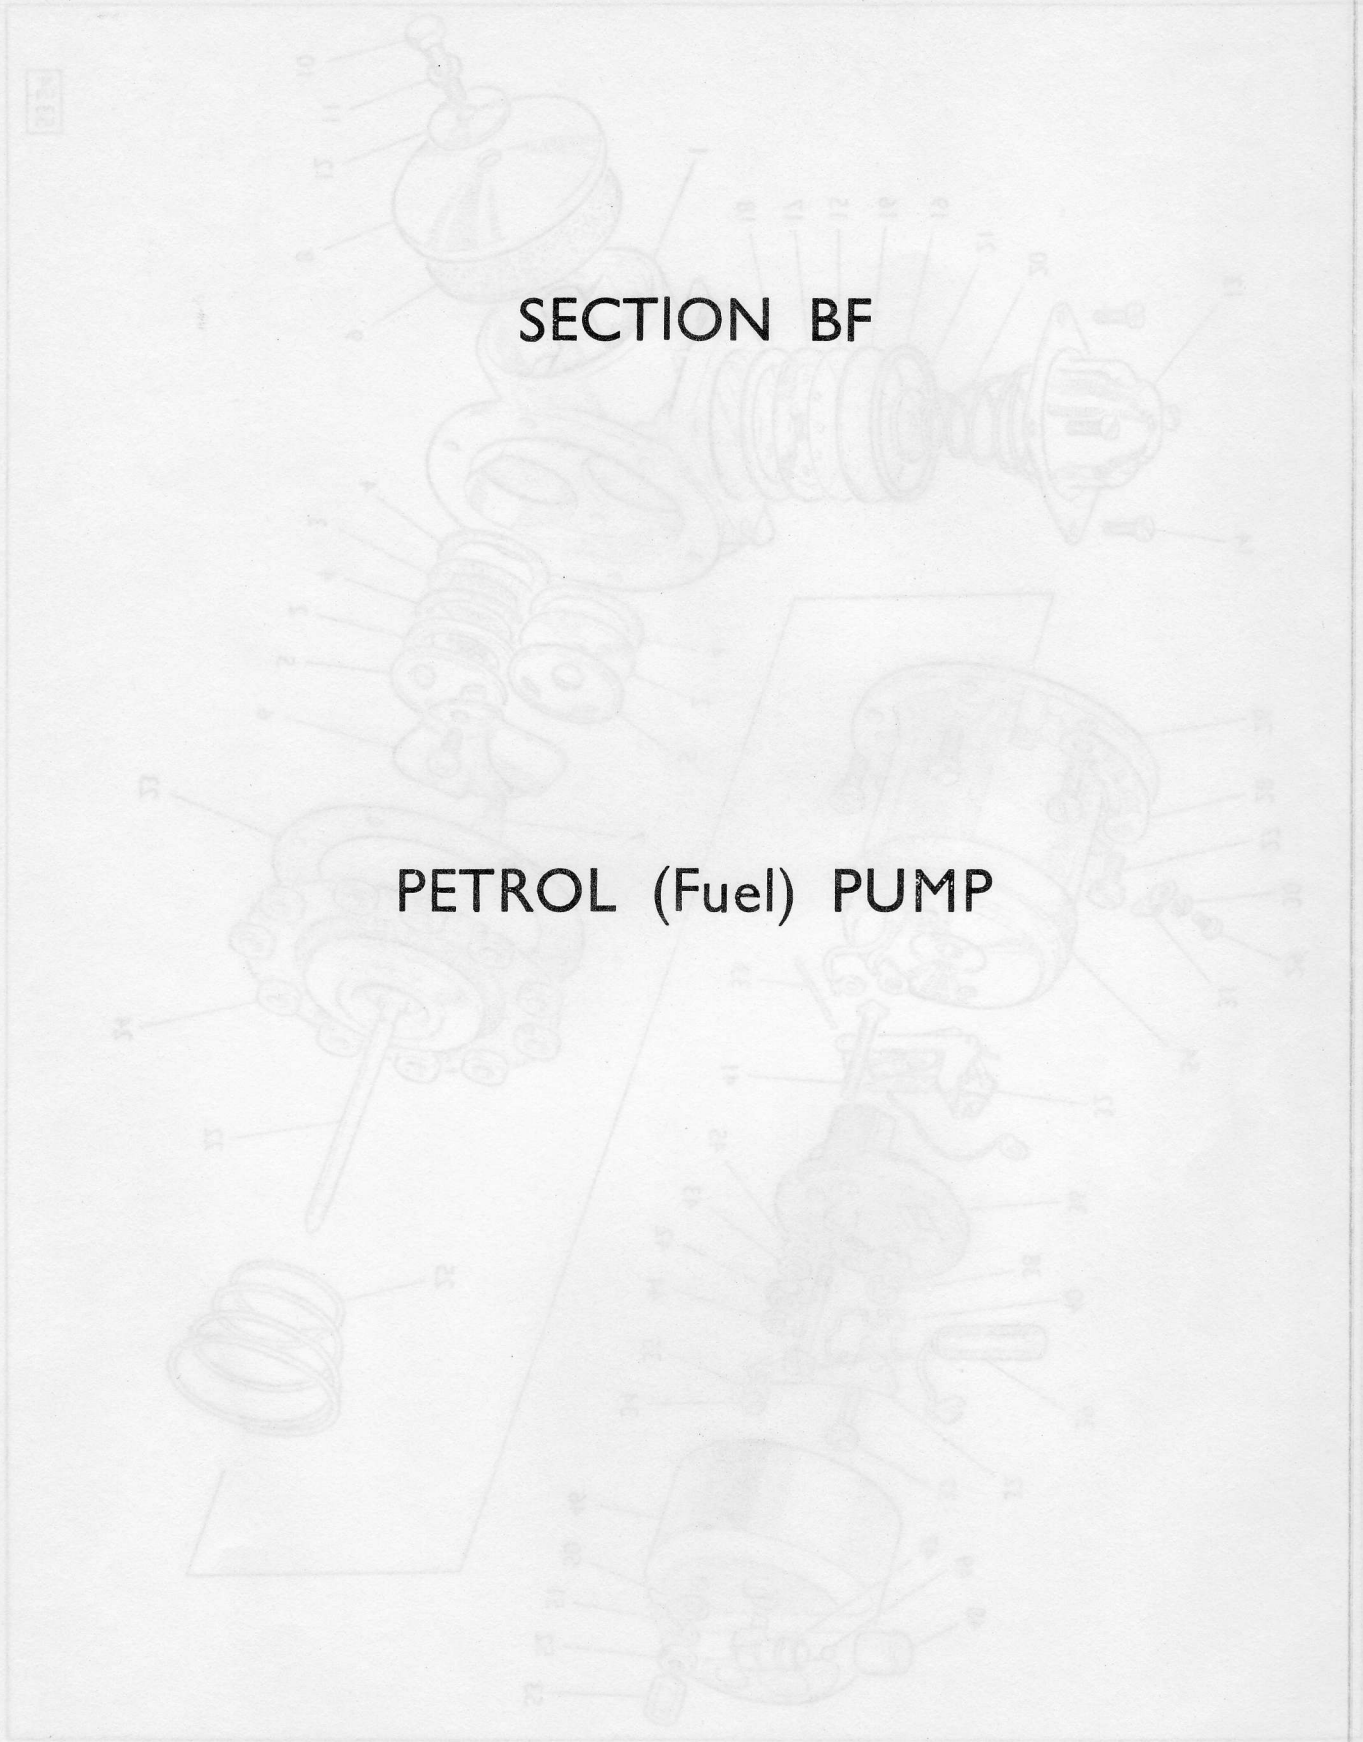


SECTION BF

PETROL (Fuel) PUMP

SECTION BF

# PETROL (Fuel) PUMP

5354

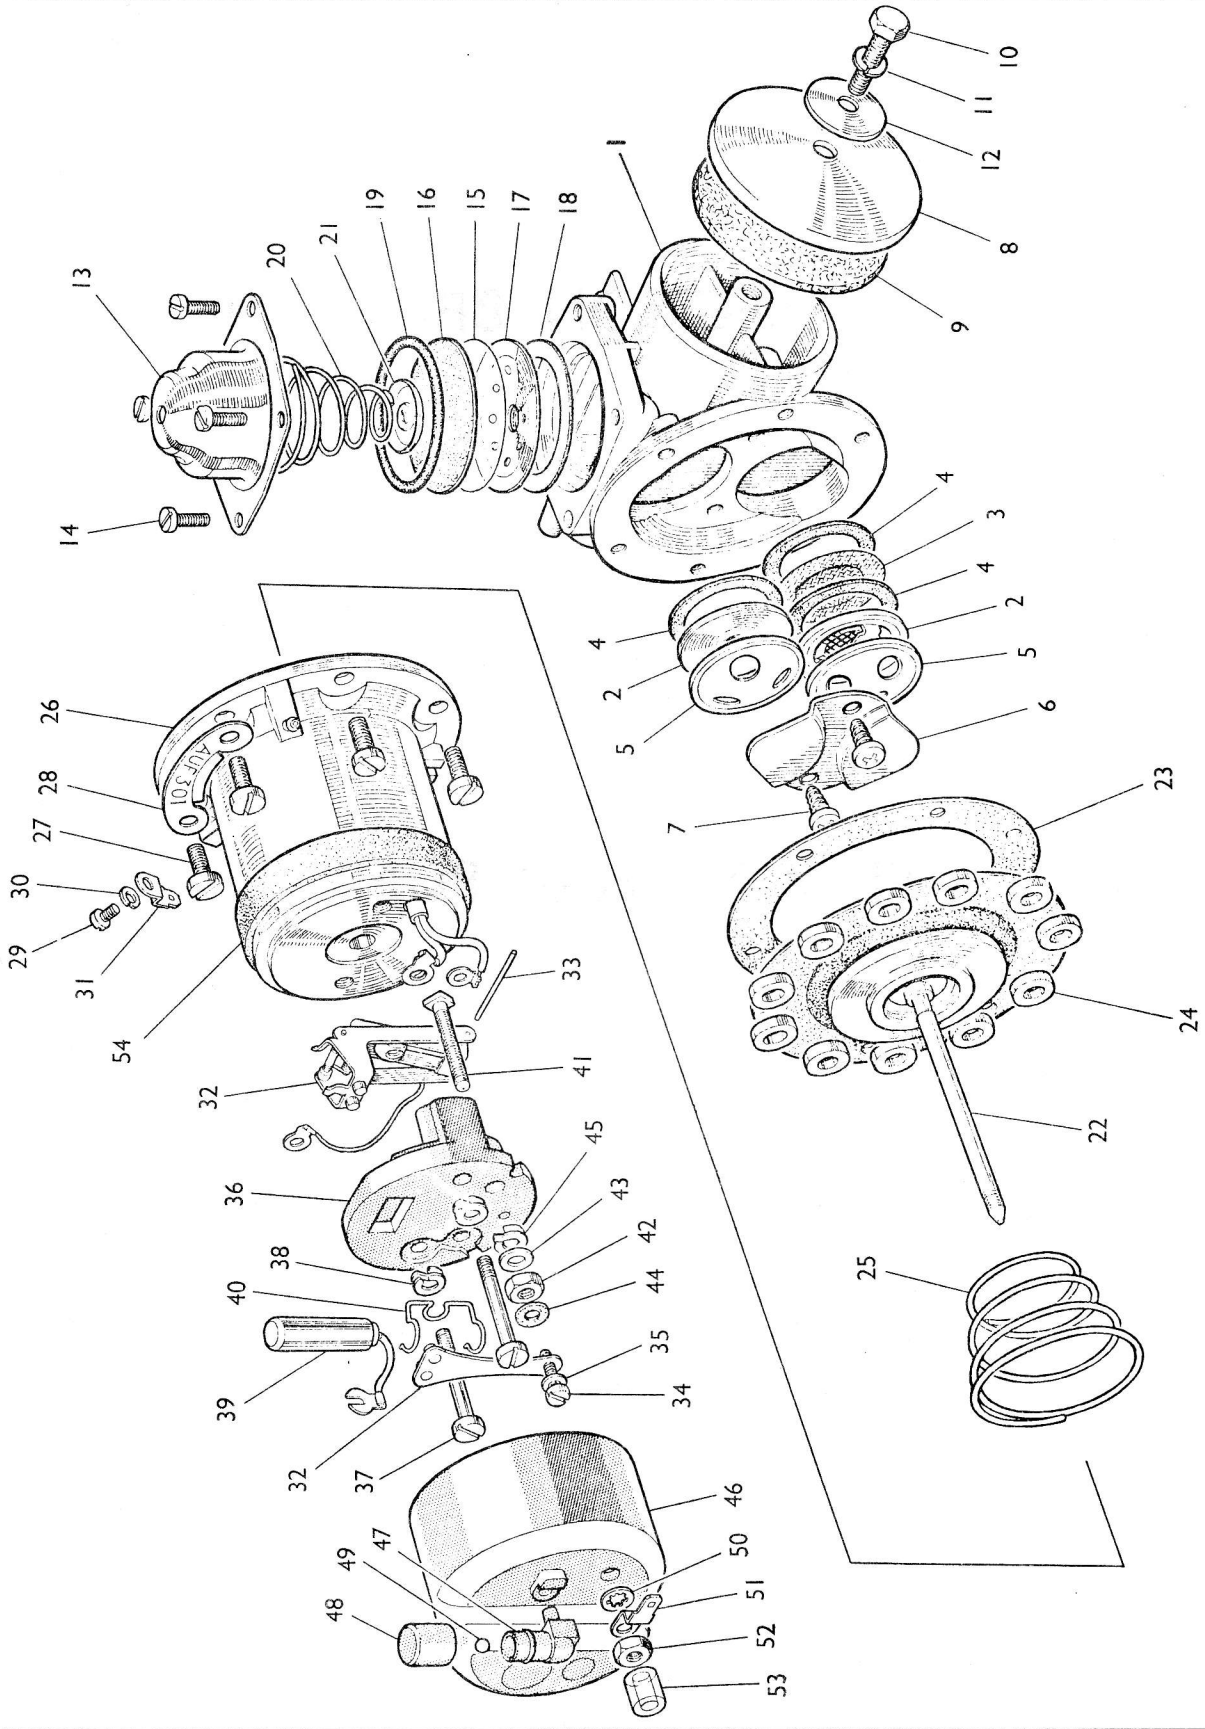

SECTION BF

PETROL (Fuel) PUMP

Plate Ref.	Rootes Part Number	DESCRIPTION	No. per Veh.	REMARKS
	1224634	PETROL (Fuel) PUMP ... ..	1	Up to B382001571
	1236116	PETROL (Fuel) PUMP ... ..	1	From B382001572
1	5042633	Body ... ..	1	
2	5042634			
		Valve assembly—Inlet and Outlet ... ..	2	
3	5042636	Inlet filter ... ..	1	
4	5042635	Sealing washer... ..	3	Up to B382001571
	5044631	Sealing washer... ..	3	From B382001572
5	5042637	Cover ... ..	2	
6		Clamp plate ... ..		} Not supplied
7		Screw—Self-tapping ... ..		
8	5042639	Dished cover ... ..	1	
9	5042638	Joint washer ... ..	1	
10	5042641	Fixing bolt 2 B.A. } Cover ... ..	1	
11	9660121	Spring washer } to body ... ..	1	
12	5042640	Dished washer } ... ..	1	
13	5042642	Cover } Air ... ..	1	Up to B382001571
	5044633	Cover } bottle ... ..	1	From B382001572
14	5042649	Screw, 4 B.A.—Cover to body ... ..	4	
15	5042645	DIAPHRAGM (Nylon) ... ..	1	Up to B382001571
	5044632	DIAPHRAGM (Nylon) ... ..	1	From B382001572
16	5042646	Support... ..	1	} Up to B382001571
17	5042647	Plate ... ..	1	
18	5042650	Washer—Plate... ..	1	
19	5042648	Sealing ring ... ..	1	Up to B382001571
	5044634	Sealing ring ... ..	1	From B382001572
20	5042643	Spring ... ..	1	} Up to B382001571
21	5042644	Cap—Spring ... ..	1	
22	5042651	DIAPHRAGM ASSEMBLY (Barrier) ... ..	1	
23	5042652	Joint Washer } ... ..	1	
24	5042653	Roller ... ..	11	
25	5042654	Spring ... ..	1	Up to B382001571
	5044635	Spring ... ..	1	From B382001572
26	5042657	COIL HOUSING ... ..	1	
27	39033080	Screw, 2 B.A.—Coil housing to pump body ... ..	6	
28		Identity label ... ..		Not supplied
29	39031040	Earth screw—4 B.A. ... ..	1	
30		Spring washer ... ..		Not supplied
31	9227107	Lucar connector—Earth screw ... ..	1	
32	5042658	ROCKER and BLADE ... ..	1	
33	5042661	Spindle—Rockers ... ..	1	
34		Screw, 5 BA—Blade ... ..		Not supplied
35	5042659	Dished washer—Blade ... ..	1	
36	5042660	PEDESTAL ... ..	1	
37	5042662	Screw } Pedestal ... ..	2	
38		Spring washer } to housing ... ..		Not supplied
39	5042667	Condenser ... ..	1	
40	5042666	Spring clip—Condenser ... ..	1	
41	5042663	Terminal screw 2 B.A. ... ..	1	
42	5042664	Terminal Nut ... ..	1	
43	5042665	Lead washer ... ..	1	
44	5042669	Washer ... ..	1	
45		Spring washer } Terminal screw ... ..		Not supplied
46	5042668	END COVER ... ..	1	
47	5042670	Valve body—Ventilator ... ..	1	
48	5042671	Ventilator cap ... ..	1	
49	5042672	Ball valve ... ..	1	

PETROL (Fuel) PUMP

Plate Ref.	Rootes Part Number	DESCRIPTION	No. per Veh.	REMARKS
		<b>PETROL (Fuel Pump)—continued</b>		
50	9663123	Shakeproof washer	1	
51	9227107	Lucar connector	1	
52	5042673	Terminal nut	1	
53	5042674	Insulating sleeve	1	
		Sealing tape		} Not supplied
54		Sealing band		
	1224807	Union—Fuel pump adaptor	2	
	9078035	Washer, fibre—Union	2	
		<b>PETROL (Fuel) PUMP MOUNTINGS</b>		
	1224769	Mounting clip	1	
	1224771	Insulator	1	
	1224756	Support channel	1	} Mk. I Mk. II
	1236114	Support channel	1	
	19503052	Screw, No. 10 U.N.F. × 5/8"	3	
	9660122	Washer, 3/8" spring	3	
	5220700	Nut, No. 10 U.N.F.	3	
	5220701	Nut, 5/8" U.N.F.	1	
	9660201	Washer, 5/8" spring	1	
	5220695	Screw, 1/2" U.N.F. × 3/4" Hex. head	1	
	9571043	Nut, 1/2" U.N.F. Nyloc	1	