


SECTION FF

CLUTCH AND CONTROLS

CLUTCH AND CONTROLS

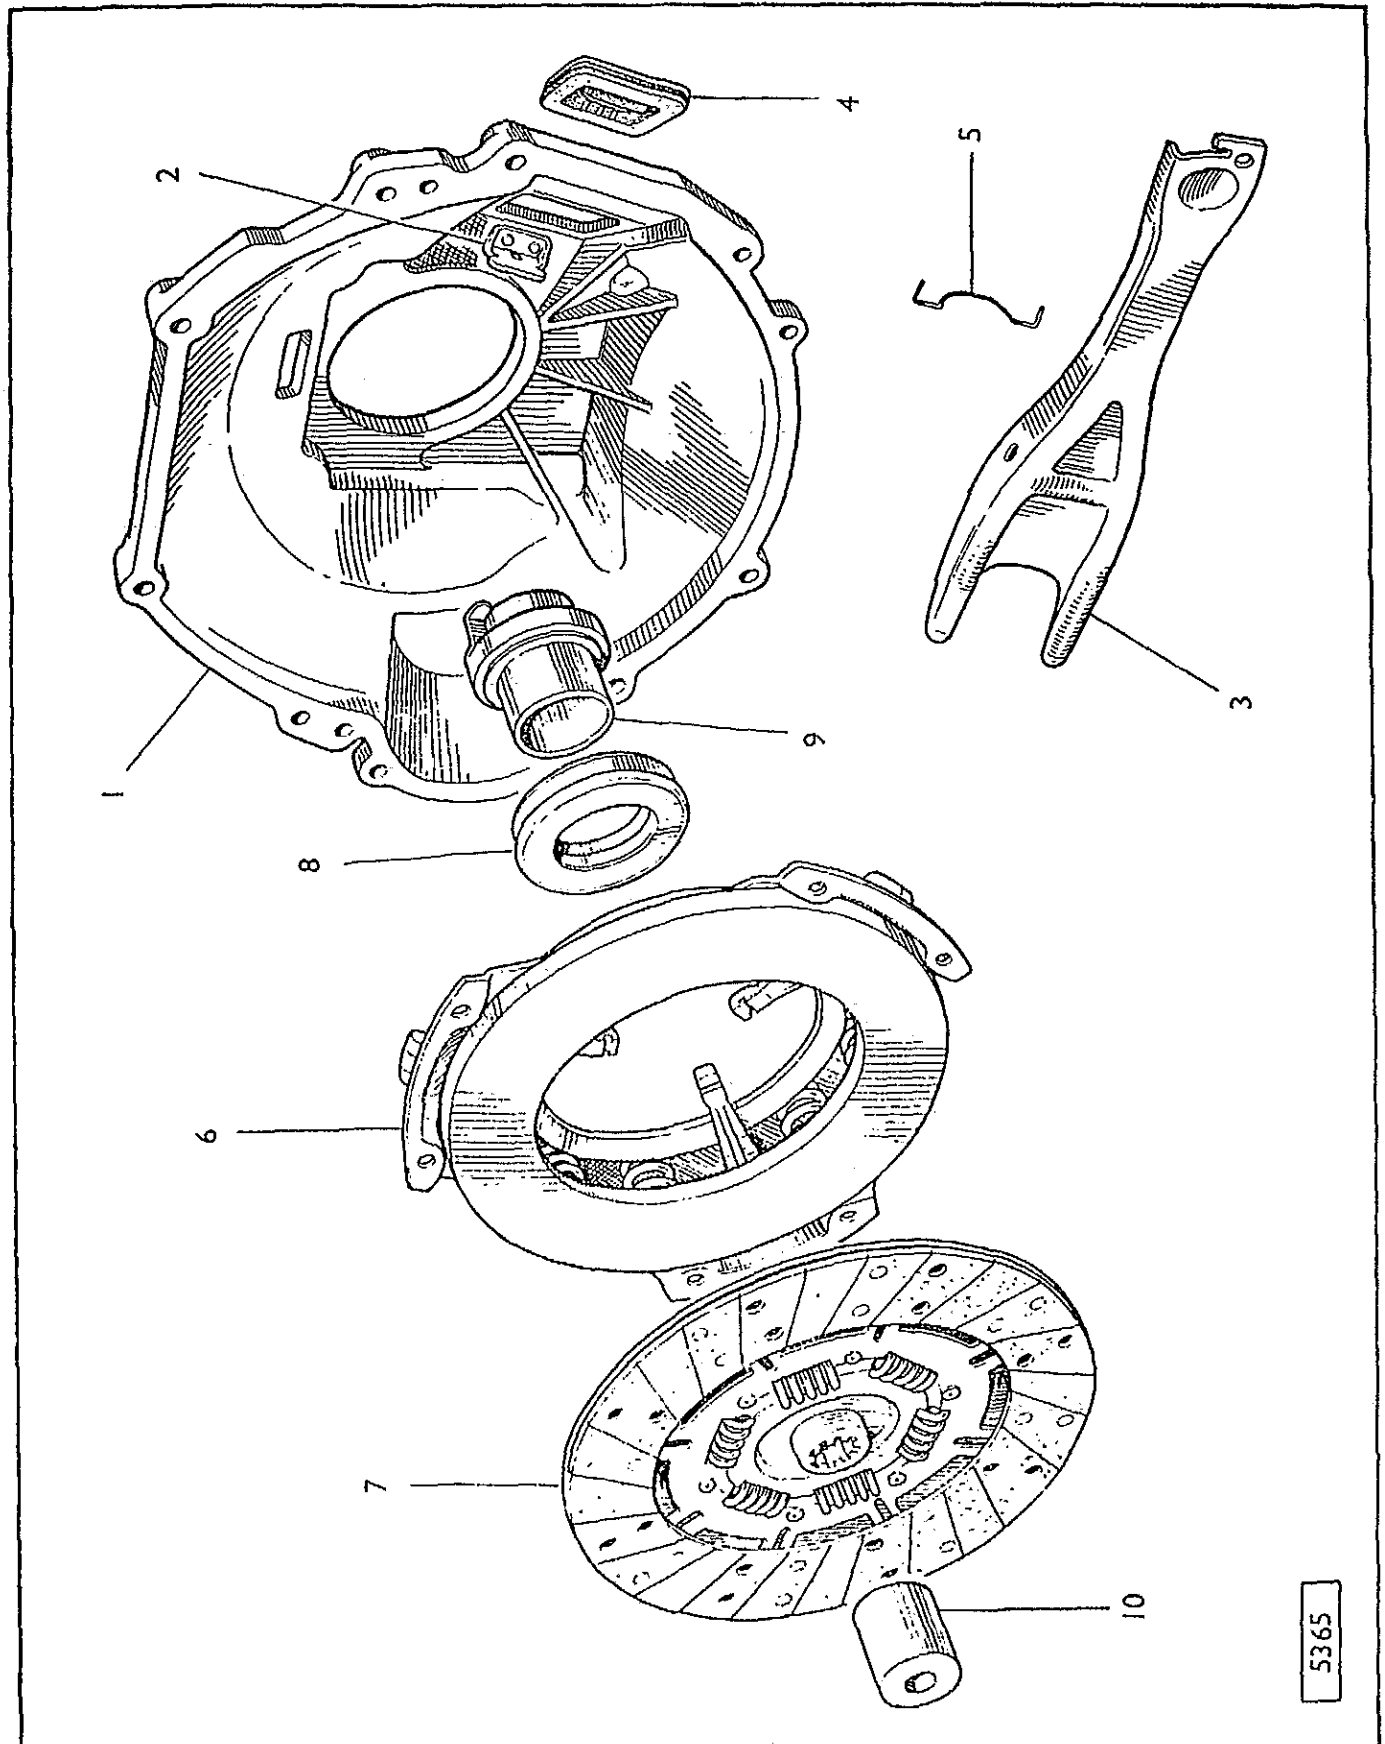

SECTION FF

2nd Issue

5365

CLUTCH AND CONTROLS

| Plate Ref. | Rootes Part Number | Ford Part Number | DESCRIPTION | No. per Veh. | REMARKS |
|------------|--------------------|------------------|---|--------------|---------------------------------|
| 1 | 6100160 | C30Z-6392-C | CLUTCH BELL HOUSING | 1 | } Not supplied |
| 2 | | B9AA-7522-A | Bracket—Release lever | 1 | |
| | | 62329-F | Rivet, $\frac{1}{8}$ "—Bracket to Bell housing | 2 | |
| 3 | 6100278 | C3AZ-7515-A | Release lever | 1 | |
| 4 | 6100276 | C3AZ-7513-A | Dust shield } Release | 1 | |
| 5 | 6100487 | AB-7562-A | Spring ... } lever | 1 | |
| 6 | 6100280 | C20Z-7563-D | CLUTCH COVER AND PRESSURE PLATE ASSY. ... | 1 | Up to B9470056 From B9470057 |
| 7 | 6100279 | C30Z-7550-A | CLUTCH DISC (Driven Plate) ASSEMBLY ... | 1 | |
| | | 8A-7580-A | Release bearing—Not supplied | 1 | |
| 8 | 6100001 | 8A-7580-A1 | Release bearing | 1 | |
| 9 | 6100042 | B7A-7561-B | Hub assembly—Clutch release bearing ... | 1 | |
| 10 | 6100439 | C20A-7600-A | Pilot bearing | 1 | |
| | 6100275 | C20Z-7007-A | Engine (Motor) rear cover plate | 1 | |
| | 1224744 | | SLAVE CYLINDER | 1 | |
| | 5042680 | | Piston | 1 | |
| | 5042679 | | Dust cover | 1 | |
| | 5037676 | | Seal | 1 | |
| | 5220157 | | Spring | 1 | |
| | K.21836 | | Dust cap | 1 | |
| | 9187004 | | Ball, $\frac{3}{8}$ " dia. | 1 | |
| | K.26371 | | Bleeder screw | 1 | |
| | 5042677 | | SLAVE CYLINDER REPAIR KIT | 1 | |
| | 1224655 | | Bracket—Slave cylinder mounting | 1 | |
| | 19406221 | | Bolt, $\frac{3}{8}$ " UNC. \times 2 $\frac{1}{2}$ " Hex. } Bracket to | 1 | |
| | 19406261 | | Bolt, $\frac{1}{2}$ " UNC. \times 3 $\frac{1}{4}$ " Hex. } clutch housing | 1 | |
| | 1224702 | | Push rod—Slave cylinder | 1 | |
| | 1224743 | | Nut—Ball end—Push rod | 1 | |
| | 1224745 | | Clip—Push rod to release lever spring ... | 1 | |
| | 1229807 | | CLUTCH PEDAL, R.H.D. | 1 | |
| | 1224677 | | CLUTCH PEDAL, L.H.D. | 1 | |
| | 1224747 | | MASTER CYLINDER | 1 | |
| | 5039060 | | Filler cap | 1 | |
| | 9122249 | | Gasket—Filler cap | 1 | |
| | 5030670 | | Valve seal | 1 | |
| | 5030672 | | Spring washer—Valve seal | 1 | |
| | 5030671 | | Valve spacer | 1 | |
| | 5030669 | | Valve stem | 1 | |
| | 5030668 | | Spring | 1 | |
| | 5038424 | | Spring retainer | 1 | |
| | 5042682 | | Plunger | 1 | |
| | 5042681 | | Plunger seal | 1 | |
| | 5042683 | | Push rod | 1 | |
| | 9207208 | | Circlip—Push rod retaining | 1 | |
| | 5030675 | | Dust cover | 1 | |
| | 5042678 | | MASTER CYLINDER REPAIR KIT | 1 | |
| | 1229822 | | PIPE—Clutch master cylinder to slave cylinder, R.H.D. ... | 1 | |
| | 1224737 | | PIPE—Clutch master cylinder to slave cylinder, L.H.D. ... | 1 | |