

PETROL (Fuel) SYSTEM - Series III onwards




SECTION UA

PETROL (Fuel) SYSTEM Series III, onwards

SECTION UA

PETROL (Fuel) SYSTEM — Series III onwards

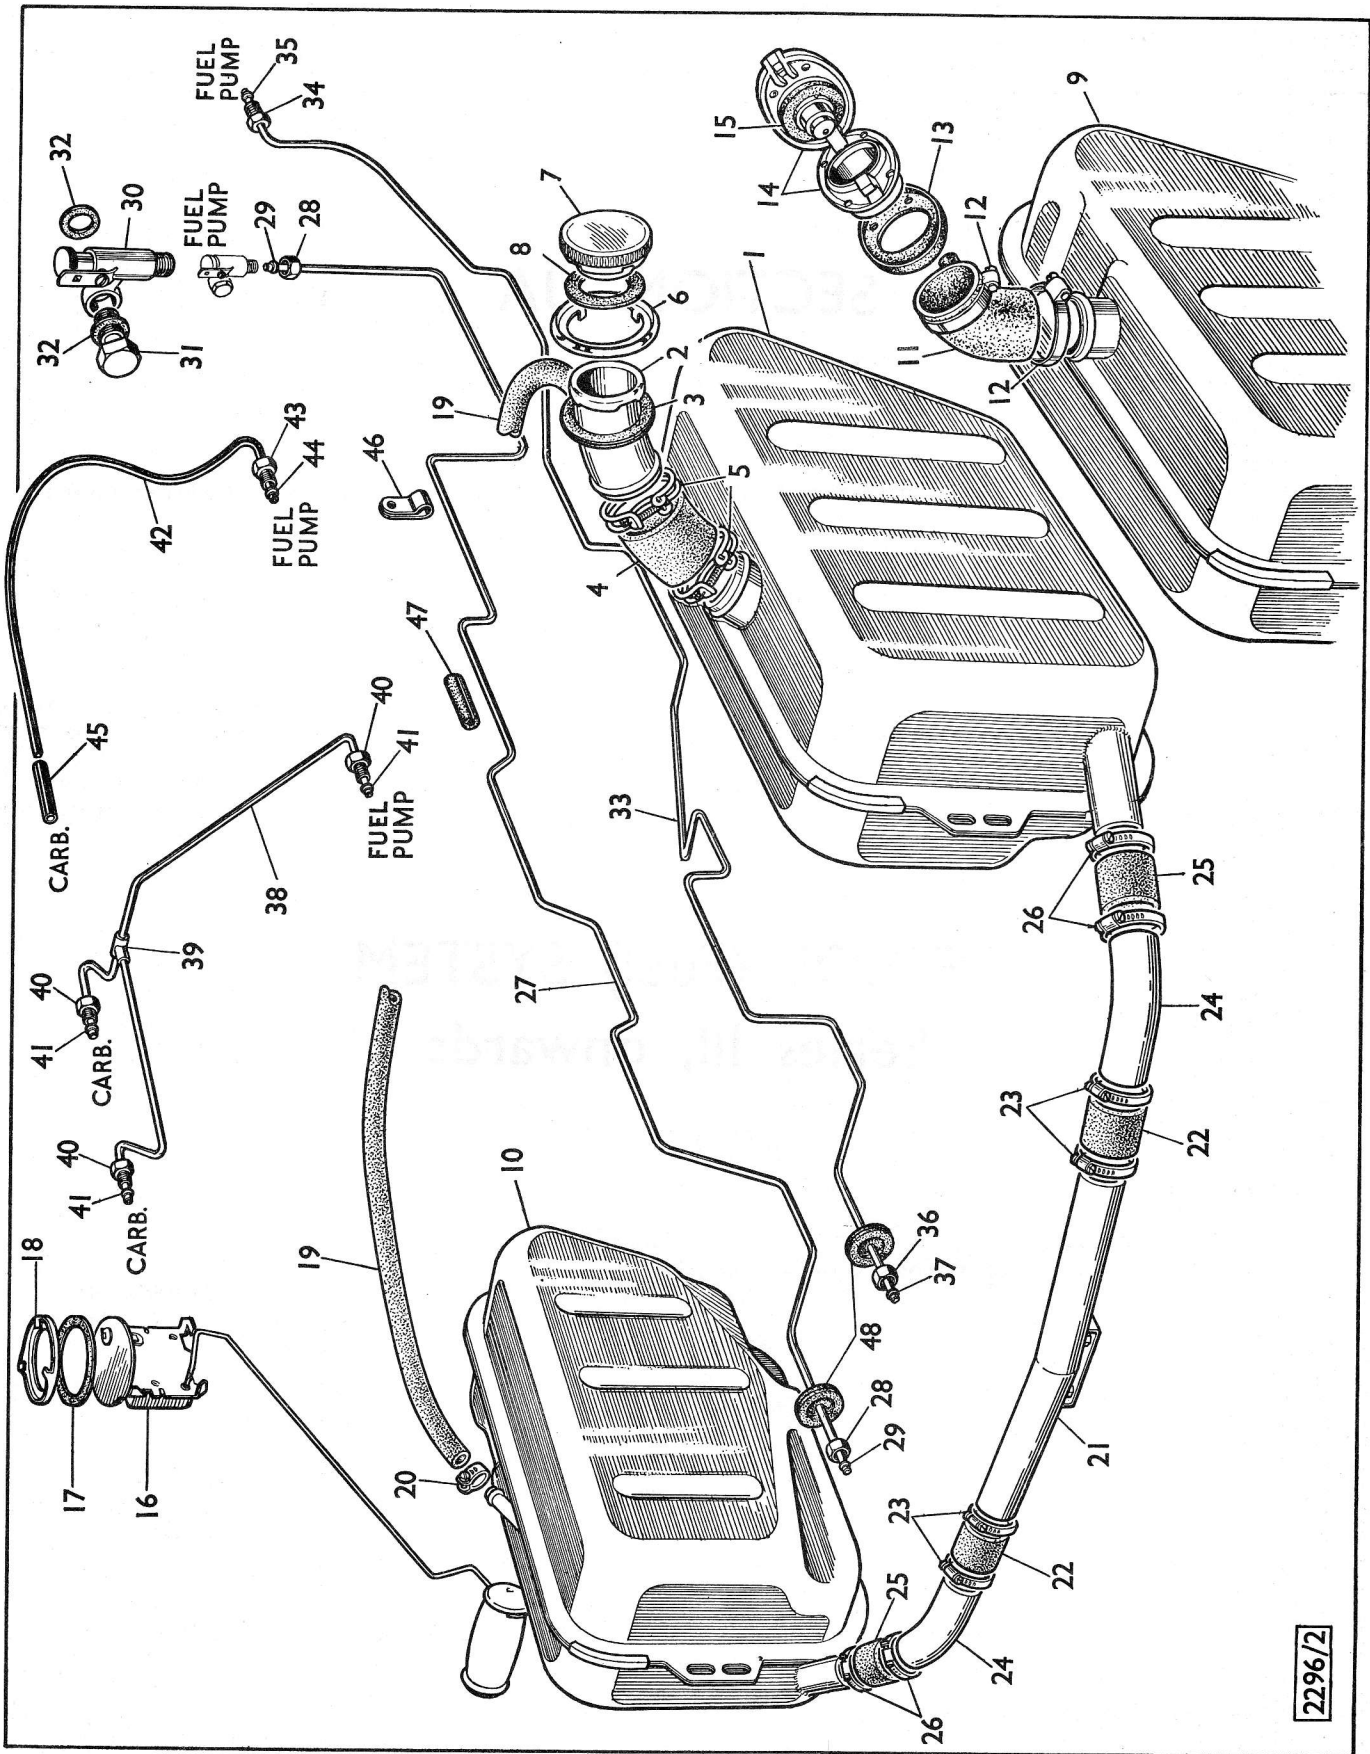

2296/2

SECTION UA

Lit. 023

PETROL (Fuel) SYSTEM — Series III onwards

Plate Ref.	Part Number	DESCRIPTION	No. per Veh.	REMARKS
	1206332 s/d by 1219504	PETROL (Fuel) TANK—R.H.	1	} Series III
	1206333 s/d by 2235554	PETROL (Fuel) TANK—L.H.	1	
1	1219504	PETROL (Fuel) TANK—R.H.	1	} Series III } Special export
	1219505 s/d by 2235554	PETROL (Fuel) TANK—L.H.	1	
2	19805052	Screw, $\frac{5}{16}$ " \times $\frac{3}{8}$ " UNF. Hex. hd. cone pt. } Petrol (Fuel) ...	4	} Series III } No longer available
	9067027	Washer, $\frac{5}{16}$ " plain } tank fixing ...	4	
	9020031	Clip, retainer } (front) ...	4	
	19505052	Screw, $\frac{5}{16}$ " \times $\frac{3}{8}$ " UNF. hex. hd. }	4	
	9067027	Washer, $\frac{5}{16}$ " plain } Petrol (Fuel) tank	8	
	9661203	Washer, $\frac{5}{16}$ " spring } fixing (rear) ...	4	
	9510051	Nut, $\frac{5}{16}$ " UNF. }	4	
	1206464	Filler pipe—Petrol (Fuel) tank	1	
	2220716	Grommet—Filler neck	1	
	9166203	Hose—Filler	1	
9780005	Clip—Hose	2		
2220743	Bezel—Petrol (Fuel) filler	1		
1206535	Filler cap	1		
5042287	Gasket—Filler cap	1		
	1206755 s/d by 2235555	PETROL (Fuel) TANK—R.H.	1	} Up to B395000000 Series IV } Up to B382000000 "260"
	1219505 s/d by 2235554	PETROL (Fuel) TANK—L.H.	1	
9	2235555	PETROL (Fuel) TANK—R.H.	1	} From B395000001 } From B382000001 "260"
10	2235554	PETROL (Fuel) TANK—L.H.	1	
11	19805052	Screw, $\frac{5}{16}$ " \times $\frac{3}{8}$ " UNF. hex. hd. cone pt. } Petrol (Fuel) ...	4	} Series IV onwards
	9067027	Washer, $\frac{5}{16}$ " plain } tank fixing ...	4	
	9020031	Clip, retainer } (front) ...	4	
	19505052	Screw, $\frac{5}{16}$ " UNF. \times $\frac{3}{8}$ " hex. hd. }	4	
	9067027	Washer, $\frac{5}{16}$ " plain } Petrol (Fuel) tank	8	
	9661203	Washer, $\frac{5}{16}$ " spring } fixing (rear) ...	4	
	9510051	Nut, $\frac{5}{16}$ " UNF. }	4	
	2226305	Hose—Filler cap	1	
	9782441	Clip—Hose to tank and neck	2	
	2226304	Seal—Filler to body	1	
2226310	FILLER CAP AND NECK ASSEMBLY	1		
5042288	Gasket—Filler cap	1		
39313081	Screw, No. 10 UNF. \times $\frac{1}{2}$ " } Petrol filler ...	4		
9663123	Washer, $\frac{3}{16}$ " shakeproof } to wing ...	4		
1223569 s/d by 1238848	PETROL (Fuel) GAUGE TANK UNIT	1		
1238848	PETROL (Fuel) GAUGE TANK UNIT	1	From B395009550 G.T., B395009421 Std., B382002362 Tiger "260"	
5040662	Sealing ring	1		
5040663	Locking ring	1		
9166252	Breather pipe	1		
9780000	Clip—Breather pipe } Alternatives ...	2		
9782101	Clip—Breather pipe }	3		
1206336 s/d by 2239563	Balance pipe inner	1	} Series III } Series IV up to B9407422 } See note *	
1206753 s/d by 2239563	Balance pipe inner	1		
2228999 s/d by 2239563	Balance pipe inner	1		
	* Note. Series IV from B9407423 up to B395000000. "260" up to B382000000.			
21	2235552 s/d by 2239563	Balance pipe inner	1	See note †
	† Note. Series V from B395000001. "260" from B382000001.			
9166175 s/d by 9166156	Hose—Balance pipe	2		
9780004	Clip—Hose	4		
1206340 s/d by 2239562	Balance pipe end	2		

PETROL (Fuel) SYSTEM — Series III onwards

Plate Ref.	Part Number	DESCRIPTION	No. per Veh.	REMARKS
	1206754 s/d by 2239562	Balance pipe end	2	Up to B395000000
24	2235553 s/d by 2239562	Balance pipe end	2	"250" up to B382000000 From B395000001 Series V "260" from B382000001
25	9166175 s/d by 9166156	Hose—Balance pipe end	2	
26	9780004	Clip—Hose	4	
	9067018	Washer, 1/4" plain	2	} Petrol (Fuel) tank
	9661163	Washer, 1/4" spring	2	
	19804052	Screw, 1/4" UNF. x 3/8" hex. hd. } to floor	2	} balance pipe
27	1206548	PETROL (Fuel) PIPE—Balance pipe to tap	1	
28	9156081	Nut } Petrol	2	} Series III
29	5220717	Olive } pipe	2	
30	1216920	Petrol (Fuel) tap	1	
31	9159537	Banjo bolt ... } Balance pipe to pump	1	}
32	P.49339	Washer—Fibre	2	
33	1224295	PETROL (Fuel) PIPE—Balance pipe to Petrol (Fuel) Pump ...	1	} Series IV up to B9407422
34	9156529	Nut } Pump	1	
35	5220717	Olive } end	1	
36	9156061	Nut } Balance	1	
37	5220717	Olive } pipe end	1	
	1228732	PETROL (Fuel) PIPE—Balance pipe to Petrol (Fuel) Pump ...	1	} See Data 2A/340
	9156528	Nut (Steel)	1	
	9156529	Nut (Brass) } Pump end	1	} Series IV from B9407423 up to B395003168
	5220717	Olive	1	
	9156095	Nut, 1/2" UNF. } Balance pipe	1	
	9157183	Olive ... } end	1	
	9168045	PETROL (Fuel) PIPE—Balance pipe to Petrol (Fuel) Pump ...	1	} See Data 2A/340 From B395003169
	9119608	Grommet—Petrol (Fuel) pipe	4	
	9179216	Clip—Petrol (Fuel) pipe to clutch housing	1	
38	1214742	PETROL (Fuel) PIPE—Pump to carburettor	1	} Up to B9204718 Soft Top, B9203886 G.T. and B9250156 CKD S/Africa
39		"T" piece (Not supplied)		
40	9156529	Nut } Petrol (Fuel) pump	3	
41	5220717	Olive } to carburettor	3	
42	1218465 s/d by 9232015	PETROL (Fuel) PIPE ASSEMBLY—Pump to carburettor ...	1	} See Data 2A/331 See note *
43	9156533	Nut } Petrol (Fuel)	1	
44	9157148	Olive } pump end	1	
	9233705 s/d by 9166235	*Note. Fitted from B9204718 S/Top, B9203887 G/T & B9250157 CKD S/Africa up to B395000000 B.U., B395900000 CKD. Connector—Petrol (Fuel) pipe—Carburettor end	1	} See note †
		†Note. Fitted from B9204718 S/Top, B9203887 G/T & B9250157 CKD S/Africa up to B94103285.		
45	9166235	Connector—Petrol (Fuel) pipe—Carburettor end	1	} From B94103286 up to Series V
	9784083	Clip—Connector	1	
	1235181	PETROL (Fuel) PIPE ASSEMBLY—Pump to Carburettor ...	1	} From B395000001 B.U., B395900001 CKD.
	1240036	Nut—Petrol (Fuel) pipe assembly	1	
	9176016	Clip—Petrol pipe to thermostat housing	1	} From B395000001 B.U., B395900001 CKD.
	19503041	Bolt, No. 10 UNF. x 1/2"	1	
	9067011 s/d by 9096074	Washer, 3/8" plain	1	} Petrol (Fuel) pipe clip
	5220700	Nut, No. 10 UNF. x 1/2"	1	
46	9176009	Clip—Petrol (Fuel) pipe—Pump to carburettor	1	
47	9166010	Sleeve—Petrol (Fuel) pipe to frame	6	} Up to B395003168
48	9119561	Grommet—Petrol (Fuel) pipe—Balance pipe to tap	1	